MADE GOODS

VINCENT HEADBOARD

ASSEMBLY INSTRUCTIONS

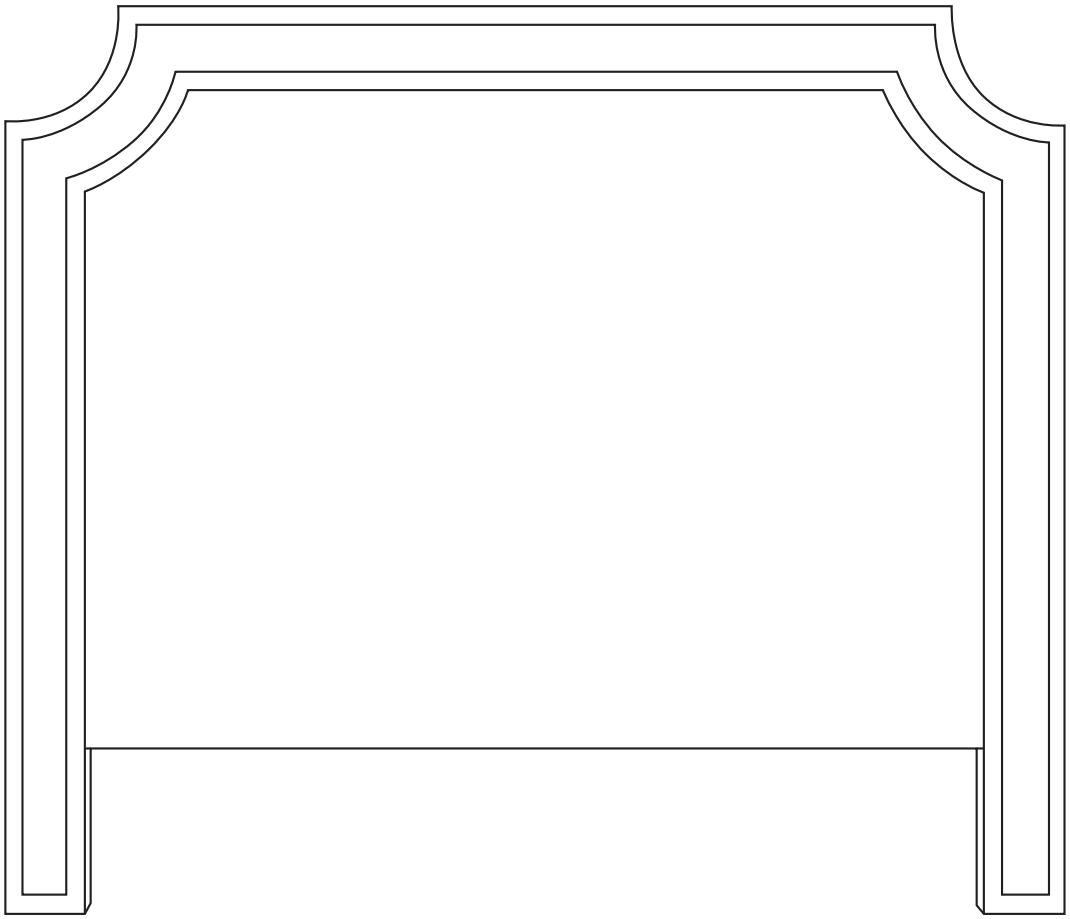

Tools and Materials Required:

Electric drill

Phillips screwdriver

PARTS LIST

· Headboard (A) – 1

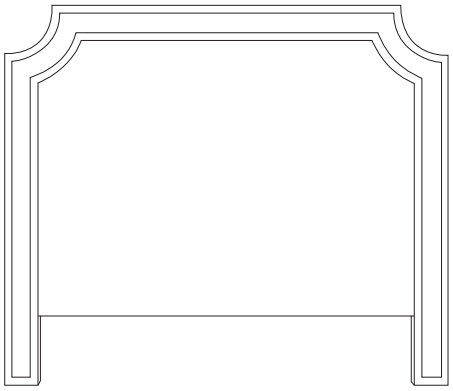

· Wall Cleat (B) – 1

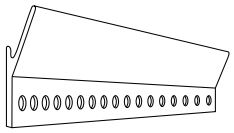

· Toggle Anchors & Screws (C) – 2 ea.

· Stud-Mounting Screws (D) – 13



· Toggle EZ Mini Anchors & Screws (E) – 2 ea.



· Level (F) – 1

ASSEMBLY INSTRUCTIONS

1. Attach the wall cleat (B) to the wall using the graphic below as a placement guide. Start at the middle of the cleat (B) using a stud-mounting screw (D). Do not fully tighten until all other spots are marked on the wall toggle (C) and toggle EZ mini (E) anchors and screws. Before fully securing the cleat (B), use a level (F) to ensure it is straight.

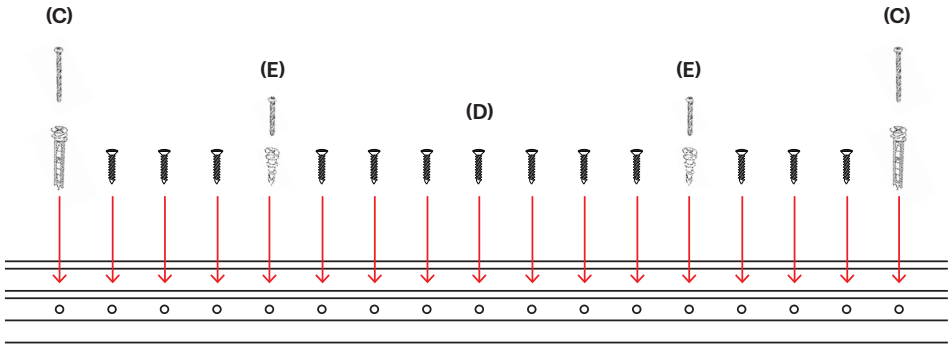

2. Mount headboard (A) by aligning the cleat on the back of headboard (A) with the wall-mounted cleat (B). Press down firmly to engage the two brackets. (Fig. 1)
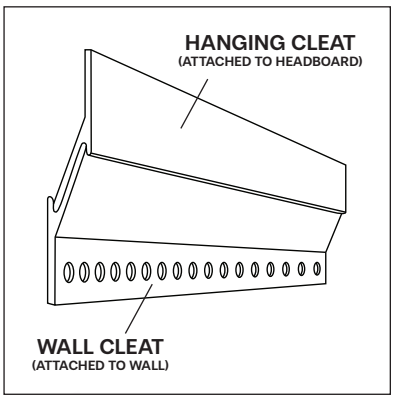
Fig. 1